Features:

SiRF starⅢ high performance GPS Chip Set
Very high sensitivity (Tracking Sensitivity: -159 dBm)
Extremely fast TTFF (Time To First Fix) at low signal level
Compact size (30mm * 28 mm * 4.6mm) suitable for space-sensitive application
Support NMEA 0183 and SiRF binary protocol

Specification:

General

Ocher al	
Chipset	SiRF StarⅢ
Frequency	L1, 1575.42 MHz
C/A code	1.023 MHz chip rate
Channels	20 channel all-in-view tracking
Sensitivity	-159 dBm
Accuracy	
Position	10 meters, 2D RMS
	5 meters, 2D RMS, WAAS enabled
Velocity	0.1 m/s
Time	lus synchronized to GPS time
Datum	
Default	WGS-84
Acquisition Time	
Reacquisition	0.1 sec., average
Hot start	1 sec., average
Warm start	38 sec., average
Cold start	42 sec., average
Dynamic Conditions	
Altitude	18,000 meters (60,000 feet) max
Velocity	515 meters /second (1000 knots) max
Acceleration	Less than 4g
Jerk	20m/sec **3
Power	
Main power input	3.3V +- 5% DC input
Power consumption	25mA (Continuous mode)
Interface	
Dimension	30mm * 28mm * 4.6mm
Baud rate	4,800 to 57,600 bps adjustable
Output message	SiRF binary or
	NMEA 0183 GGA, GSA, GSV, RMC, VTG, GLL

Environmental

Operating Temp -40° C to $+85^{\circ}$ C

Pin Assignment & Dimension



Pin description

wer input):

This is the main DC supply for a 3.3V + 5% DC input power module board.

* GPS-VBAT (Backup battery):

This is the battery backup input that powers the SRAM and RTC when main power is removed. Typical current draw is 15uA. Without an external backup battery, the module/engine board will execute a cold star after every turn on. To achieve the faster start-up offered by a hot or warm start, a battery backup must be connected. The battery voltage should be between 2.0v and 5.0v.

* GPS-LED:

User can use this I/O pin for special function. For example, on/off LED

* GPS-TX:

This is the main transmits channel for outputting navigation and measurement data to user's navigation software or user written software.

Output TTL level, $0V \sim 2.85V$

* GPS-RX:

This is the main receive channel for receiving software commands to the engine board from SiRFdemo software or from user written software.

* GND:

GND provides the ground for the engine board. Connect all grounds.



PIN	NAME
PIN 1	VDD
PIN 2	GND
PIN 3	GPS-TX
PIN 4	GPS-RX
PIN 5	GPS-LED
PIN 6	GPS-VBAT